

#### **General Description**

The GT-1612F5L-AGGBI is a receiving module that supports dual frequency and multi-mode. It has built-in highly integrated GNSS receiver chip, supports multi band and multi system cm4f (main frequency 530mhz, 12NM Technology) chip of Third-generation BeiDou Navigation Satellite System (BDS-3). Besides, it is capable of tracking allglobal civil navigation systems (BDS,GPS,GLONASS,Galileo,QZSS,NavIC and SBAS) in all bands.

GT-1612F5L-AGGBI module is based on the state of art CYNOSURE-III architecture, integrating multiband and multi-system GNSS RF and baseband. This newly designed architecture makes this single chip achieve sub-meter level position accuracy without correction data from ground-based augmentation station and higher sensitivity, greater for improved jam resistance and multipath, provide a highly robust service in complicated environment.

GT-1612F5L-AGGBI module contains AG3335M positioning engine inside, featuring high sensitivity, low power consumption, and fast TTFF. The superior cold start sensitivity allows it to acquire, track, and get position fix autonomously in difficult weak signal environment. The receiver's superior tracking sensitivity allows continuous position coverage in nearly all outdoor application environments. The high performance signal parameter search engine is capable of testing 16 million time-frequency hypotheses per second, offering superior signal acquisition and TTFF speed.

#### **Applications**

- LBS (Location Based Service)
- PND (Portable Navigation Device)
- Vehicle navigation system
- Mobile phone






Figure: GT-1612F5L-AGGBI Top View

#### **Features**

- Build on high performance, low-power MediaTek
   AG3335M chip set
- Ultra high Track sensitivity: -165dBm
- Concurrent reception of multi-band and multi-system satellite signals
- Supports all civil GNSS signals
- Supports BDS-3 signal
- Extremely fast TTFF at low signal level (Cold start ≤24s, Hot start ≤1s).
- Multipath detection and suppression
- Works with passive and active antenna
- Low power consumption: Max 15mA@3.3V
- NMEA-0183 compliant protocol or custom protocol

Revision: V1.4-August 2022

- Operating voltage:3.0V to 3.6V
- SMD type with stamp holes
- Small form factor: 16x12x2.6mm
- Operating temperature  $-40 \sim +85$ °C
- RoHS compliant (Lead-free)



## 1. Functional Description

#### 1.1. Key Features

**Table 1: Key Features** 

Parameter	Specification
GNSS engine	<ul> <li>GNSS engine has 135channels and DSP accelerators</li> </ul>
GNSS reception	<ul> <li>GPS/QZSS: L1 C/A, L5</li> <li>GLONASS: L10F</li> <li>GALILEO: E1(E1B+E1C), E5A</li> <li>BEIDOU: B1I, B2A</li> <li>NavIC: L5</li> <li>SBAS: WAAS, EGNOS, MSAS, GAGAN</li> </ul>
Update rate	GNSS 20Hz Maximum
Position accuracy [1]	<ul><li>GNSS &lt;1m CEP</li><li>SBAS &lt;1m CEP</li></ul>
Velocity & Time accuracy	<ul> <li>GNSS 0.01m/s CEP</li> <li>SBAS 0.05 m/s</li> <li>1PPS 25 ns</li> </ul>
Time to First Fix(TTFF) [1]	<ul><li>Hot start 1 sec</li><li>Cold start24 secs</li></ul>
Sensitivity [1]	<ul> <li>Cold start-148dBm</li> <li>Hot start -155dBm</li> <li>Reacquisition -158dBm</li> <li>Tracking &amp; navigation -165dBm</li> </ul>
GNSS Operating limit	<ul> <li>Velocity 515m/s</li> <li>Altitude 18,000m</li> </ul>
Datum	Default WGS-84, User definable
UART Port	<ul> <li>UART Port: TXD and RXD</li> <li>Supports baud rate from 9600bps to 961200bps.</li> <li>NMEA 0183 Protocol Ver. 4.00/4.10,Cynosure GNSS Receiver Protocol</li> </ul>
Temperature Range	<ul> <li>Normal operation: -40°C ~ +85°C</li> <li>Storage temperature: -55°C ~ +100°C</li> <li>Humidity: 5% ~ 95%</li> </ul>
Physical Characteristics	<ul> <li>Size: 16±0.15 × 12.2±0.15 × 2.6±0.1mm</li> <li>Weight: Approx. 2.0g</li> </ul>



#### 1.2. Block Diagram

The GT-1612F5L-AGGBI is a high performance (BDS, GPS, GLONASS, Galileo, QZSS,NavIC and SBAS) in all bands (L1,L5). satellite navigation receiver in a compact surface mount package. It is based on the AG3335M positioning technology, providing high performance signal acquisition and tracking. The simple UART serial interface and the standard NMEA-0183 protocol make usage of GT-1612F5L-AGGBI very easy and straightforward.

The GT-1612F5L-AGGBI module performs all the necessary system initialization, signal acquisition, signal tracking, data demodulation, and calculation of navigation solution autonomously.

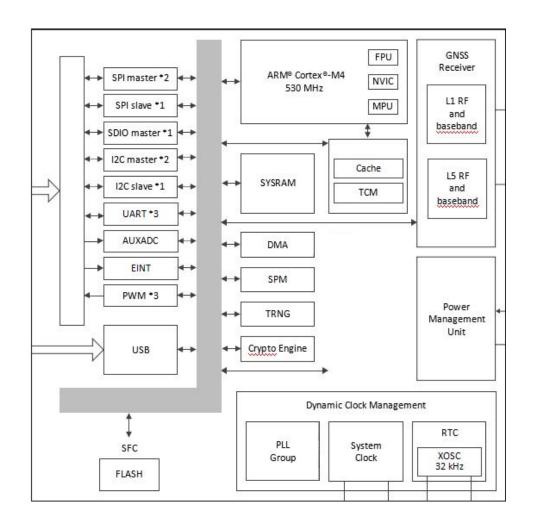


Figure 1: Block Diagram

## 2. Application

The module is equipped with a 24-pin SMT pad that connects to your application platform. Sub-interfaces included in the pad are described in details in the following chapters.



#### 2.1. Pin Assignment

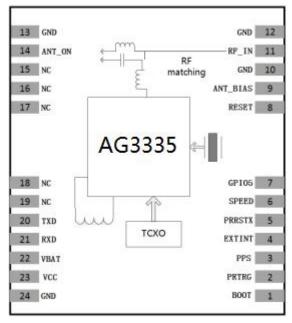


Figure 2: Pin Assignment

#### 2.2. Pin Definition

Pin No.	Name	Description		
1	ВООТ	No connection for normal use. Pull-low for loading firmware into empty or corrupted Flash memory from ROM mode by the module maker.		
2	PRTRG	Multi-Function Port: System Wakeup Input,Pin unassociated Peripherals or GPIO		
3	1PPS	One-pulse-per-second (1PPS) time mark output, 3.3V LVTTL. The rising edge synchronized to UTC second when getting 3D position fix. The pulse duration is about 800usec at rate of 1 Hz.		
4	EXTINT	External Interrupt Pin		
5	PRRSTX	Active "L" with internal Pull-up resistor		
6	SPEED	MUX IO: GPIO, UART 1 Serial Data Transmit (UOUT1)		
7	GPIO5	MUX IO: GPIO, SQI data 3 (SQI3), UART 1 Serial Data Receive(UIN1)		
8	RESET	Leave it Open if not used		
9	ANT_BIAS	Output power supply for external LNA or active antenna		
10	GND	Ground		
11	RF_IN	RF signal input		
12	GND	Ground		
13	GND	Ground		
14	ANT_ON	Antenna status of antenna supervisor		
15	NC	No connection, empty pin		
16	NC	No connection, empty pin		
17	NC	No connection, empty pin		
18	NC	No connection, empty pin		



## GT-1612F5L-AGGBI Dual Frequency Multi-Mode Receiver Module

19	NC	No connection, empty pin	
20	TXD	MUX IO: GPIO, UART 0 Serial Data Transmit (UOUT0)	
21	RXD	MUX IO: GPIO, UART 0 Serial Data Receive (UIN0)	
22	VBAT/NC	3.3V Backup Domain I/O power supply Backup LDO input (Requires program to use a program ) . External battery backup is not supported by default.	
23	VCC	Main power supply, 3.3V +/- 10%	
24	GND	Ground	

#### 2.3. Electrical Specification

#### **Absolute Maximum Ratings**

Parameter	Minimu	Maximu	Condition
	m	m	
Supply Voltage (VCC)	-0.5	3.6	Volt
Input Pin Voltage	-0.5	VCC+0.5	Volt
Input Power at RF_IN		+20	dBm
Storage Temperature	-55	+100	degC

#### **Operating Conditions**

Parameter			Max	Unit
Supply Voltage (VCC)	3	3.3	3.6	Volt
Acquisition Current (exclude active antenna current)		12		mA
Tracking Current (exclude active antenna current)		15		mA
I/O port &UART port working voltage:	I/O port &UART port working voltage:			
Output Low Voltage	1		0.4	Volt
Output HIGH Voltage			-	Volt
Input LOW Voltage			0.7	Volt
Input HIGH Voltage			3.6	Volt
Input LOW Current			10	uA
Input HIGH Current			10	uA
RF Input Impedance (RFIN)		50		Ohm




#### 2.4. UART Interface

The module provides one universal asynchronous receiver& transmitter serial port. The module is designed as DCE (Data Communication Equipment), following the traditional DCE-DTE (Data Terminal Equipment) connection. The module and the client (DTE) are connected through the signals shown in the following figure. It supports data baud-rate from 4800bps to 115200bps.

#### **UART** port:

TXD: Send data to the RXD1 signal line of DTE.

RXD: Receive data from the TXD1 signal line of DTE.

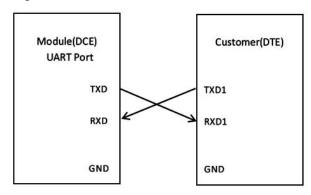

**Figure 3:Serial Port Connection** 

#### This UART port has the following features:

- UART port can be used for NMEA Protocol output and proprietary commands input.
- The default output NMEA type setting is GGA, GLL, GSA, GSV, VTG, RMC, and ZDA.
- UART port supports the following data rates:
   4800, 9600, 14400, 19200, 38400, 57600, 115200bps.
   9600bps by default, 8 bits, no parity bit, 1 stop bit.
- Hardware flow control and synchronous operation are not supported.

The UART port does not support the RS-232 level but only CMOS level. If the module's UART port is connected to the UART port of a computer, it is necessary to add a level shift circuit between the module and the computer. Please refer to the following figure.

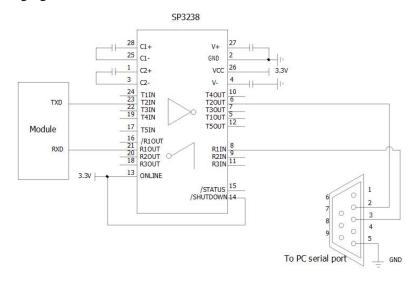


Figure 5: RS-232 Level Shift Circuit



#### 3. Antenna Consideration

The GT-1612F5L-AGGBI is designed to use with active antenna, and passive antenna with higher antenna gain. Passive ceramic patch antenna is low-cost and provides good sensitivity. 50-ohm output larger size ceramic patch antenna with higher antenna gain can be connected directly to RF input of the module. Usually the ceramic patch antenna and GT-1612F5L-AGGBI are mounted on opposite side of the PCB to reduce possibility of picking up digital noise. To improve signal reception performance, use larger ground plane under the patch antenna if possible; larger the ground plane, larger the overall antenna gain. The center frequency of the ceramic patch antenna changes with ground plane size. For optimal L1+L5 peration, frequency bandwidth of the antenna needs to cover 1174MHz ~ 1179MHz and 1573MHz ~ 1606MHz respectively when mounted on the PCB. It is usual to ask the ceramic patch antenna vendor to select or tune a patch antenna that best matches the customer PCB.

Active antenna is essentially a passive antenna with built-in LNA and a coaxial cable to connect the antenna to the module. It has the flexibility of being located remotely from the module, but requires antenna power. Active antenna usually costs more than passive patch antenna, but the performance in low signal environments is usually better. Active antenna with gain of  $10 \sim 20 \text{dB}$  and noise figure less than 1.5dB can be used with GT-1612F5L-AGGBI.

Antenna Type	Passive	Active
CDC %-O7CC F (MII-)	1575.42 +/- 2 (L1)	1575.42 +/- 2 (L1)
GPS&QZSS Frequency (MHz)	1176.45 +/- 12(L5)	1176.45 +/- 12(L5)
DDC Fragueray (MII-)	1561 .098+/- 2(B1)	1561 .098+/- 2(B1)
BDS Frequency (MHz)	1176.45+/- 2(B2)	1176.45+/- 2(B2)
GLONASS Frequency (MHz)	1602MHz +/- 4(L1)	1602MHz +/- 4(L1)
CALILEO E (MII-)	1575.42 +/- 2 (E1)	1575.42 +/- 2(E1)
GALILEO Frequency (MHz)	1176.45 +/- 12(E5)	1176.45 +/- 12(E5)
NavIC Frequency (MHz)	1176.45 +/- 2(L5)	1176.45 +/- 2(L5)
VSWR	< 2 (typical)	< 2 (typical)
Polarization	RHCP	RHCP
Antenna Gain	> 0dBi	> -2dBi
LNA Gain		20dB (typical)
Noise Figure		< 1.5dB
Total Gain		> 18dBi

## 4. Power Supply Requirement

GT-1612F5L-AGGBI requires a stable power supply, avoid ripple on VCC pin (<50mVpp). Power supply noise can affect the receiver's sensitivity. Bypass capacitors of 10uF and 0.1uF is recommended to be placed close to the module VCC pin; the values could be adjusted according to the amount and type of noise present on the supply line.



## 5.Backup Supply

The purpose of backup supply voltage pin (VBAT) is to keep the SRAM memory and the RTC powered when the module is powered down. This enables the module to have a faster time-to-first-fix when the module is powered on again. The backup current drain is less than  $12\mu A$ . In normal powered on state, the internal processor access the SRAM and current drain is higher in active mode.

### **6.1PPS Output**

•When using four or more satellites for 3D positioning, the rising edge of the pulse generating 1 pulse per second (Duration: 800 seconds) on 1PPS pins is aligned with the UTC seconds, and the accuracy is about 20nS. When it is not positioned, it outputs a constant low pulse.

## 7. Layout Guidelines


#### Separate RF and digital circuits into different PCB regions.

It is necessary to maintain 50-ohm impedance throughout the entire RF signal path. Try keeping the RF signal path as short as possible.

Do not route the RF signal line near noisy sources such as digital signals, oscillators, switching power supplies, or other RF transmitting circuit. Do not route the RF signal under or over any other components (including GT-1612F5L-AGGBI), or other signal traces. Do not route the RF signal path on an inner layer of a multi-layer PCB to minimize signal loss. Avoid sharp bends for RF signal path. Make two 45-deg bends or a circular bend instead of a single 90-degree bend if needed.

Avoid vias with RF signal path whenever possible. Every via adds inductive impedance. Vias are acceptable for connecting the RF grounds between different layers. Each of the module's ground pins should have short trace tying immediately to the ground plane below through a via.

The bypass capacitors should be low ESR ceramic types and located directly adjacent to the pin they are for.

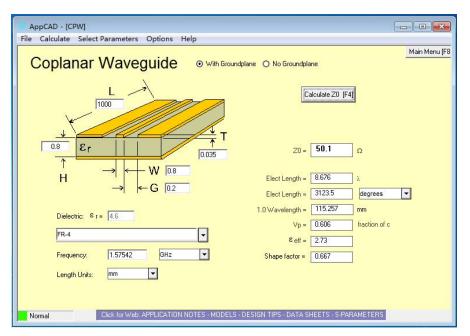

**Requires Of Antenna Design** 



## 8.ESD handling precautions

GT-1612F5L-AGGBI series modules are Electrostatic Sensitive Devices (ESD). Observe precautions for handling! Failure to observe these precautions can result in severe damage to the GPS receiver!

GPS receivers are Electrostatic Sensitive Devices (ESD) and require special precautions when handling. Particular care must be exercised when handling patch antennas, due to the risk of electrostatic charges. In addition to standard ESD safety practices, the following measures should be taken into account whenever handling the receiver:

- Unless there is a galvanic coupling between the local GND(i.e. the work table) and the PCB GND, then the first point of cont act when handling the PCB must always be between the local GND and PCB GND.
- Connect first to local GND GND
- ♦ Before mounting antenna patch, connect ground of the device When handling the RF pin, do not come into contact with any charged capacitors and be careful when contacting materials that can develop charges (e.g. patch antenna ~10pF, coax cable ~50-80pF/m, soldering iron....)



❖ To prevent electrostatic discharge through the RF input, do not touch any exposed antenna area. If there is any risk that such exposed antenna area is touched in non ESD protected work a rea, implement proper ESD protection measures in the design.



♦ When soldering RF connectors and patch antennas to the receiv er's RF pin, make sure to use an ESD safe soldering iron (tip).

Table 1: ESD Endurance Table (Temperature : 25°C, Humidity: 45%)

Pin	Contact Discharge	Air Discharge	
RF_IN	±5KV	±10KV	
VCC	±5KV	±10KV	
UART	±3KV	±6KV	
Others	±2KV	±4KV	



#### 9. Mechanical Dimensions

This chapter describes the mechanical dimensions of the module.

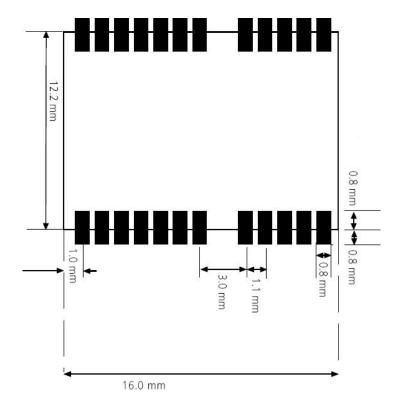


Figure 6: Top view Dimensions

## 10 .Manufacturing, Packaging and Ordering Information

#### 10.1. Assembly and Soldering

GT-1612F5L-AGGBI module is intended for SMT assembly and soldering in a Pb-free reflow process on the top side of the PCB. It is suggested that the minimum height of solder paste stencil is 100um to ensure sufficient solder volume. Pad openings of paste mask can be increased to ensure proper soldering and solder wetting over pads. It is suggested that the peak reflow temperature is 220~240°C (for SnAg3.0Cu0.5 alloy). The absolute maximum reflow temperature is 260°C. To avoid damage to the module when it is repeatedly heated, it is suggested that the module should be mounted after reflow soldering for the other side of PCB has been completed. Recommended reflow soldering thermal profile is shown below:

www.gotop-zzu.com Page 10 of 18 Revision: V1.2-August 2020



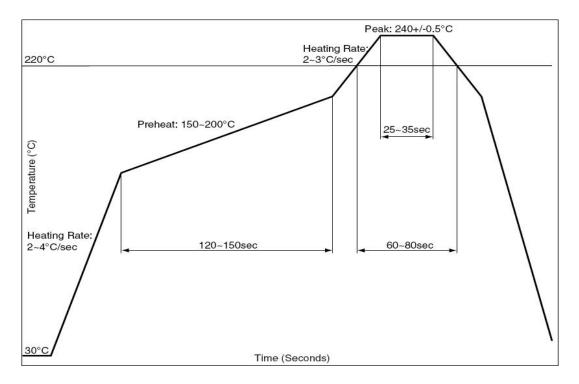


Figure 7: Recommended Reflow Soldering Thermal Profile

#### 10.2. Moisture Sensitivity


GT-1612F5L-AGGBI module is sensitive to moisture. To prevent GT-1612F5L-AGGBI from permanent damage during reflow soldering, baking before reflow soldering is required in following cases:

- ♦ Humidity indicator card: One or more indicating spots are no longer blue.
- ♦ The seal is opened and the module is exposed to excessive humidity.

GT-1612F5L-AGGBI shall be baked for 192 hours in a cryogenic environment at 40°C+5°C/-0°C and <5%RH, or for 24 hours in a high-temperature environment at 125°C±5°C. As the plastic packaging tape is not heat-resistant, the module should be removed from the tape before baking, otherwise, the tape will be damaged due to high temperature heating, you can also refer to the actual production technology of the SMT factory.



#### 10.3. Tape and Reel Packaging

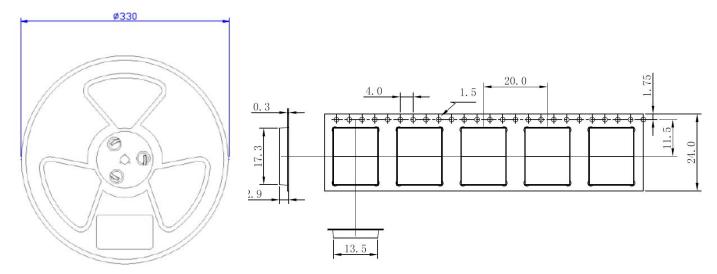

Unit: mm

Quantity per reel:1000pcs Lengh per reel: 20m

Figure 8: Tape and Reel Specifications





Figure 9: Packaging physical Figure

**Table 2: Reel Packaging** 

Model Name	MOQ for MP	Minimum Package: 1000pcs
		Size: $365 \text{mm} \times 350 \text{mm} \times 53 \text{mm}$
GT-1612F5L-AGGBI	1000pcs	N.W: 1.42kg
		G.W: 1.6kg



#### 11. NMEA 0183 Protocol

The output protocol supports NMEA-0183 standard. The implemented messages include GGA, GLL, GSA, GSV, VTG, RMC, and ZDA messages. The NMEA message output has the following sentence structure:

\$AACCC, c-c\*hh

The detail of the sentence structure is explained in Table 1.

**Table 3: The NMEA sentence structure** 

character	HEX	Description
· <b>'</b> \$''	24	Start of sentence.
Aaccc		Address field. "aa" is the talker identifier. "ccc" identifies the sentence type.
,	2C	Field delimiter.
С-с		Data sentence block.
دد <b>*</b> ٬›	2A	Checksum delimiter.
Hh		Checksum field.
<cr><lf></lf></cr>	0D0A	Ending of sentence. (carriage return, line feed)

Table 4: Overview of NMEA messages

\$GNGGA	Time, position, and fix related data of the receiver.		
\$GNGLL	Position, time and fix status.		
\$GNGSA	Used to represent the ID of satellites which are used for position fix. When GPS&GLONASS&Galileo & BDS satellites are used for positioning solutions, the ID of available positioning satellites is counted and output with multiple statements.		
\$GPGSV \$GLGSV \$GAGSV \$GBGSV	Satellite information about elevation, azimuth and CNR, satellites are used in position solution, a \$GPGSV sentence is used for GPS satellites, a \$GLGSV sentence is used for GLONASS satellites, a \$GAGSV sentence is used for GALILEO satellites. And \$BDGSV sentence is used for BDS satellites.		
\$GNRMC	Time, date, position, course and speed data.		
\$GNVTG	Course and speed relative to the ground.		
\$GNZDA	UTC, day, month and year and time zone.		

The formats of the supported NMEA messages are described as follows:

#### 11.1 GGA – Global Positioning System Fix Data

Time, position and fix related data for a GNSS receiver. Structure:

\$GNGGA,hhmmss.sss,ddmm.mmmm,a,dddmm.mmmm,a,x,xx,x.x,x.x,M,x.x,M,x.x,xxxx\*hh

For example:

\$GNGGA,175258.000,2447.0870,N,12100.5221,E,2,15,0.7,95.2,M,19.6,M,,0000\*72

Field	Name	Example	Description
1	UTC Time	175258.000	UTC of position in hhmmss.sss format, (000000.000 ~ 235959.999)
2	Latitude	L 2447 08700	Latitude in ddmm.mmmmm format Leading zeros transmitted



## GT-1612F5L-AGGBI Dual Frequency Multi-Mode Receiver Module

3	N/S Indicator	N	Latitude hemisphere indicator, 'N' = North, 'S' = South
4	Longitude	12100.52210	Longitude in dddmm.mmmmm format Leading zeros transmitted
5	E/W Indicator	Е	Longitude hemisphere indicator, 'E' = East, 'W' = West
6	Quality Indicator	2	Quality Indicator 0: position fix unavailable 1: valid position fix, SPS mode 2: valid position fix, differential GPS mode 3: GPS PPS Mode, fix valid 6: Estimated (dead reckoning) Mode
7	Satellites Used	15	Number of satellites in use, $(00 \sim 56)$
8	HDOP	0.7	Horizontal dilution of precision, $(0.0 \sim 99.9)$
9	Altitude	95.2	mean sea level (geoid), ( - 9999.9 ~ 17999.9)
10	Geoidal Separation	19.6	Geoidal separation in meters
11	Age pf Differential GPS data		Age of Differential GPS data NULL when DGPS not used
12	DGPS Station ID	0000	Differential reference station ID, 0000 ~ 1023
13	Checksum	72	

#### 11.2 GLL – Latitude/Longitude

Latitude and longitude of current position, time, and status. Structure:

\$GNGLL,ddmm.mmmm,a,dddmm.mmmm,a,hhmmss.sss,A,a\*hh

For example:

\$GNGLL,2447.0870,N,12100.5221,E,175258.000,A,D\*42

Field	Name	Example	Description	
1	Latitude	2447.08700	Latitude in ddmm.mmmmm format Leading zeros transmitted	
2	N/S Indicator	N	Latitude hemisphere indicator 'N' = North 'S' = South	
3	Longitude	Leading zeros transmitted  Longitude in dddmm.mmmmm format Leading zeros transmitted		
4	E/W Indicator	Е	Longitude hemisphere indicator 'E' = East 'W' = West	
5	UTC Time	175258.000	UTC time in hhmmss.sss format (000000.000 ~ 235959.999)	
6	Status	A	Status, 'A' = Data valid, 'V' = Data not valid	
7	Mode Indicator	D	Mode indicator 'N' = Data not valid 'A' = Autonomous mode 'D' = Differential mode 'E' = Estimated (dead reckoning) mode	
8	Checksum	42		



#### 11.3 GSA – GNSS DOP and Active Satellites

GNSS receiver operating mode, satellites used in the navigation solution reported by the GGA sentence and DOP values.

Structure:

For example:

\$GNGSA,A,3,21, 12,15,18,20,24,10,32,25,13,,,1.2,0.7,1.0,1\*18

\$GNGSA,A,3,03,04,05,07,,,,,1.2,0.7,1.0,4\*34

\$GNGSA,A,3,76,86,71,72,65,85,87,77,...,1.0,0.5,0.9,2\*32

\$GNGSA,A,3,76,44,13,15,66,23,45,28,...,1.0,0.5,0.9,2\*32

Field	Name	Example	Description	
1	Mode	A	Mode 'M' = Manual, forced to operate in 2D or 3D mode 'A' = Automatic, allowed to automatically switch 2D/3D	
2	Mode	3	Fix type  1 = Fix not available  2 = 2D  3 = 3D	
3	Satellite used 1~12	21, 12, 15, 18, 20, 24, 10, 32, 25, 13	01 ~ 32 are for GPS; 33 ~ 64 are for WAAS (PRN minus 87); 193 ~ 197 are for QZSS; 65 ~ 88 are for GLONASS (GL PRN); 01 ~ 36 are for GALILEO (GA PRN); 01 ~ 37 are for BDS (BD PRN). GPS, GLONASS, GALILEO and BDS satellites are differentiated by the GNSS system ID in table 3. Maximally 12 satellites are included in each GSA sentence	
4	PDOP	1.2	Position dilution of precision (0.0 to 99.9)	
5	HDOP	0.7	Horizontal dilution of precision (0.0 to 99.9)	
6	VDOP	1.0	Vertical dilution of precision (0.0 to 99.9)	
7	GNSS System ID	1	1 for GPS, 2 for GLONASS, 3 for GALILEO, 4 for BDS	
8	Checksum	18		

#### 11.4 GSV – GNSS Satellites in View

Number of satellites (SV) in view, satellite ID numbers, elevation, azimuth, and SNR value. Four satellites maximum per transmission.

Structure:

For example:

\$GPGSV, 4,1, 13, 02,72, 109, 43,24, 69,035, 48,18, 52,330, 42,21, 49,246, 43, 1\*69

\$GPGSV, 4,2, 13, 20,47, 118, 42,15, 39,046, 44,41, 39,242, 41,12, 28,129, 42, 1\*68

\$GBGSV, 4,3, 13, 10,25, 321, 38,25, 15,170, 35,32, 14,278, 36,136, 063, 35, 1\*64

\$GBGSV, 4,4, 13, 05,04, 126, 36, 1\*57

\$GBGSV, 2,1, 07, 67,63, 158, 46,05, 61,202, 44,04, 57,199, 44,03, 39,243, 42,4\*7f

\$GAGSV, 2,2, 07, 01, 00,000, 39,02, 00,000, 24,06, 00,266, 4\*44

\$GAGSV, 3,1, 09, 72,60, 135,48, 71,40, 047, 50,86, 37,048, 50,87, 30,336, 49, 1\*7b

\$GLGSV, 3,2, 09, 65,24, 184,477, 23,278, 43,76, 16,218, 44,85, 05,095, 40, 1\*7e

\$GLGSV , 3,3 , 09 , 78,00 , 000 , 31,1\*4c

## GT-1612F5L-AGGBI Dual Frequency Multi-Mode Receiver Module

Field	Name	Example	Description	
1	Number of message	4	Total number of GSV messages to be transmitted (1 - 5)	
2	Sequence number	1	Sequence number of current GSV message	
3	Satellites in view	13	Total number of satellites in view $(00 \sim 20)$	
4	Satellite ID	02	01 ~ 32 are for GPS; 33 ~ 64 are for WAAS (PRN minus 87); 193 ~ 197 are for QZSS; 65 ~ 88 are for GLONASS (GL PRN); 01 ~ 36 are for GALILEO (GA PRN); 01 ~ 37 are for BDS (BD PRN). GPS, GLONASS, GALILEO and BDS satellites are differentiated by the GNSS system ID in table 3. Maximally 12 satellites are included in each GSA sentence	
5	Elevation	72	Satellite elevation in degrees, (00 ~ 90)	
6	Azimuth	109	Satellite azimuth angle in degrees, (000 ~ 359)	
7	SNR	43	C/No in dB (00 ~ 99) Null when not tracking	
8	Signal ID	1	1 for L1/CA, 4 for L5/CA	
9	Checksum	69		

#### 11.5 RMC - Recommended Minimum Specific GNSS Data

Time, date, position, course and speed data provided by a GNSS navigation receiver. Structure:

\$GNRMC,hhmmss.sss,A,dddmm.mmmm,a,dddmm.mmmm,a,x.x,x.x,ddmmyy,,,a\*hh For example:

\$GNRMC,175258.000,A,2447.0870,N,12100.5220,E,000.0,000.0,220617,,,D\*75

Field	Name	Example	Description	
1	UTC time	175258.000	UTC time in hhmmss.sss format (000000.00 ~ 235959.999)	
2	Status	A	Status 'V' = Navigation receiver warning 'A' = Data Valid	
3	Latitude	2447.08700	Latitude in dddmm.mmmmm format Leading zeros transmitted	
4	N/S indicator	N	Latitude hemisphere indicator 'N' = North 'S' = South	
5	Longitude	12100.52210	Longitude in dddmm.mmmmm format Leading zeros transmitted	
6	E/W Indicator	Е	Longitude hemisphere indicator 'E' = East 'W' = West	
7	Speed over ground	0.000	Speed over ground in knots (000.0 ~ 999.9)	
8	Course over ground	000.0	Course over ground in degrees $(000.0 \sim 359.9)$	
9	UTC Date	220617	UTC date of position fix, ddmmyy format	
10	Mode indicator	D	Mode indicator 'N' = Data not valid 'A' = Autonomous mode 'D' = Differential mode 'E' = Estimated (dead reckoning) mode	
11	checksum	75		



#### 11.6 VTG - Course Over Ground and Ground Speed

The actual course and speed relative to the ground.

Structure:

GNVTG,x.x,T,,M,x.x,N,x.x,K,a\*hh

For example:

\$GNVTG,000.0,T,,M,000.0,N,000.0,K,D\*16

Field	Name	Example	Description	
1	Course	000.0	True course over ground in degrees $(000.0 \sim 359.9)$	
2	Speed	000.0	Speed over ground in knots (000.0 ~ 999.9)	
3	Speed	000.0	Speed over ground in kilometers per hour (000.0 ~ 1800.0)	
4	Mode	D	Mode indicator 'N' = Data not valid 'A' = Autonomous mode 'D' = Differential mode 'E' = Estimated (dead reckoning) mode	
5	Checksum	16		

#### 11.7 ZDA – TIME AND DATE

UTC, day, month, year and local time zone Structure:

\$GNZDA,hhmmss.sss,xx,xx,xxxx,xx\*hh<CR><LF>

For example:

\$GNZDA,175258.000,22,06,2017,00,00\*46<CR><LF>

Field	Name	Example	Units	Description
1	UTC time	175258.000		UTC time in hhmmss.ss format (000000.00 ~ 235959.99)
2	UTC Day	22		UTC time: day (01 ~ 31)
3	UTC Month	06		UTC time: month $(01 \sim 12)$
4	UTC Year	2017		UTC time: year (4 digit format)
5	Local zone hour	00		Local zone hours $(00 \sim +/ - 13)$
6	Local zone minutes	00		Local zone minutes (00 ~59)
7	Checksum	46		Checksum



# ©Copyright 2022 Gotop Technology Co., Ltd. All Right Reserved The information contained herein is subject to change without notice. Gotop Technology Co., LTD

Add: AreaC, 4th layer, A1 building, QingHu Silicon Valley Power, LongHua district, Shenzhen, China

Phone: 86-755-23804156 fax: 86-755-23804155 N 22° 32' 17", E 114° 07' 07" http://www.gotop-zzu.com

Not to be reproduced in whole or part for any purpose without written permission of Gotop Technology Inc ('Gotop'). Information provided by Gotop is believed to be accurate and reliable. These materials are provided by Gotop as a service to its customers and may be used for informational purposes only. Gotop assumes no responsibility for errors or omissions in these materials, nor for its use. Gotop reserves the right to change specification at any time without notice.

These materials are provides 'as is' without warranty of any kind, either expressed or implied, relating to sale and/or use of Gotop products including liability or warranties relating to fitness for a particular purpose, consequential or incidental damages, merchantability, or infringement of any patent, copyright or other intellectual property right. Gotop further does not warrant the accuracy or completeness of the information, text, graphics or other items contained within these materials. Gotop shall not be liable for any special, indirect, incidental, or consequential damages, including without limitation, lost revenues or lost profits, which may result from the use of these materials.

Gotop products are not intended for use in medical, life-support devices, or applications involving potential risk of death, personal injury, or severe property damage in case of failure of the product.

www.gotop-zzu.com Page 18 of 18 Revision: V1.2-August 2020